

BT50

モノ3°



Fig.1


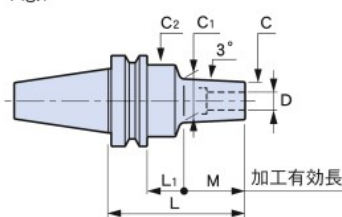


Fig. 2

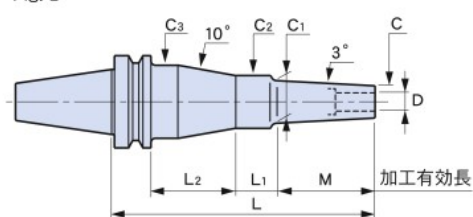

■オプション

- ブルスタッド→P.180

■注意事項

- ブルスタッド…加熱時は取外すか、穴アキタイプをご使用ください。
- 工具のセッティング…工具はセーフティマークの奥まで挿入しセットしてください。


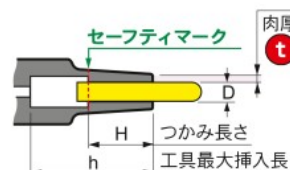


Fig.3

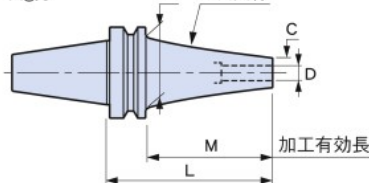

ヒートロボ電磁1200S
(HRD-01S)対応表

[○] 対応可 [×] 対応不可
[▲] 焼ばめ装置をかき上げて使用可能 →P.197

CV : カーブ

肉厚

コード	Fig.	φD	φC	t	L	M	L1	L2	φC1	φC2	φC3	H	h	Kg	N	S	縮図
BT50-SLSA3-110-M 42	1	3	6	1.5	110	42	30	—	10.4	25	—	9	165	3.6	4.4	9.1	○ 1
-135-M 67					135	67			13				190		5.1	14.7	4
-140-M 42					140	42	60		10.4				195	3.7	4.4	9.8	2
-165-M 67					165	67			13				220		5.2	15.9	5
-M 97						97	30		16.2	26					6	20.8	7
-170-M 42	2				170	42	33	57	10.4		40		225	4.1	4.6	9.9	3
-195-M 67					195	67			13				250		5.4	15.8	6
-M 97	1					97	60	—	16.2		—			3.8	6.1	22.3	8
-225-M 97	2				225		33	57			40		280	4.1	6.2	22.1	9
-SLRA3- 90-M 22	1	3	7.5	2.25	90	22	30	—	9.8	25	—	9	145	3.6	4.6	2.8	○ 10
-110-M 42					110	42			11.9	26			165	3.7	4.9	5.4	13
-120-M 22					120	22	60		9.8	25			175		4.7	3.2	11
-135-M 67					135	67	30		14.5	26			190		5.4	9	16
-140-M 42					140	42	60		11.9				195	3.8	5	6	14
-150-M 22	2				150	22	33	57	9.8	25	39		205	4	4.9	3.2	12
-165-M 67	1				165	67	60	—	14.5		—		220	3.8	5.5	10	17
-M 97						97	30		17.7	26				3.7	6.1	13	19
-170-M 42	2				170	42	33	57	11.9		40		225	4.1	5.1	6	15
-195-M 67					195	67			14.5				250		5.7	9.8	18
-M 97	1					97	60	—	17.7		—			3.8	6.2	14.5	20
-M127						127	30		20.8	32					7.7	15.7	22
-225-M 97	2				225	97	33	57	17.7	25	39		280	4.1	6.3	14.4	21
-M127	1					127	60	—	20.8	36	—				7.7	16.3	23
-255-M127	2				255		30	60		32	46		310	4.4	8	16.5	24