



# CoroMill® 390 square shoulder milling cutter

Coromant EH - Internal coolant supply

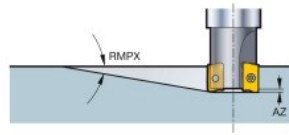

KAPR

90°

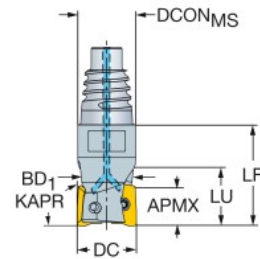

DC	CZC <sub>MS</sub>	APMX <sub>EFW</sub>	APMX <sub>FFW</sub>	RMPX	AZ	CNSC	CNSC	Ordering code	Dimensions, mm										
									DCON <sub>MS</sub>	BD	LB	LF	LU	NM	KG	RPMX	CICT	MIID	
9.7	07	E10	2.0	5.80	7°	0.5	1	2	R390-0097EH10-07L	9.7	9.2	12.5	20.0	12.5	0.5	0.12	55600	2	390R-07..
10.0	07	E10	2.0	5.80	7°	0.5	1	2	R390-010EH10-07L	9.7	9.3	12.5	20.0	12.5	0.5	0.07	54100	2	390R-07..
11.7	07	E12	2.0	5.80	5°	0.5	1	2	R390-0117EH12-07L	11.7	11.0	11.9	20.0	11.9	0.5	0.04	47400	2	390R-07..
12.0	07	E12	2.0	5.80	5°	0.5	1	2	R390-012EH12-07L	11.7	11.3	11.9	20.0	11.9	0.5	0.12	46500	2	390R-07..
	07	E12	2.0	5.80	5°	0.5	1	3	R390-012EH12-07M	11.7	11.3	11.9	20.0	11.9	0.5	0.07	46500	3	390R-07..
13.7	07	E12	2.0	5.80	3°	0.5	1	2	R390-0137EH12-07L	11.7	12.9	20.0	20.0		0.5	0.13	42000	2	390R-07..
	07	E12	2.0	5.80	3°	0.5	1	3	R390-0137EH12-07M	11.7	12.9	20.0	20.0		0.5	0.12	42000	3	390R-07..
14.0	07	E12	2.0	5.80	3°	0.5	1	3	R390-014EH12-07M	11.7	13.2	20.0	20.0		0.5	0.07	41400	3	390R-07..
15.7	07	E16	2.0	5.80	3°	0.5	1	3	R390-0157EH16-07M	15.5	14.7	15.7	25.0	15.7	0.5	0.10	38100	3	390R-07..
16.0	07	E16	2.0	5.80	3°	0.5	1	3	R390-016EH16-07M	15.5	15.0	15.7	25.0	15.7	0.5	0.09	37600	3	390R-07..
	07	E16	2.0	5.80	3°	0.5	1	4	R390-016EH16-07H	15.5	15.0	15.7	25.0	15.7	0.5	0.14	37600	4	390R-07..
	11	E16	5.5	10.00	10°	1.0	1	2	R390-016EH16-11L	15.5			27.0		1.2	0.08	41500	2	R390-11..
18.0	07	E16	2.0	5.80	2°	0.5	1	3	R390-018EH16-07M	15.5	17.0	25.0	25.0		0.5	0.10	34800	3	390R-07..
	11	E16	5.5	10.00	5°	1.0	1	2	R390-018EH16-11L	15.5			27.0		1.2	0.11	31000	2	R390-11..
20.0	07	E20	2.0	5.80	2°	0.5	1	4	R390-020EH20-07M	19.3	19.0	14.4	25.0	14.4	0.5	0.10	32500	4	390R-07..
	07	E20	2.0	5.80	2°	0.5	1	5	R390-020EH20-07H	19.3	19.0	14.4	25.0	14.4	0.5	0.16	32500	5	390R-07..
	11	E20	5.5	10.00	5°	1.0	1	2	R390-020EH20-11L	19.3			30.0		1.2	0.13	34600	2	R390-11..
	11	E20	5.5	10.00	5°	1.0	1	3	R390-020EH20-11M	19.3			30.0		1.2	0.13	34600	3	R390-11..
22.0	11	E20	5.5	10.00	5°	1.0	1	2	R390-022EH20-11L	19.3			30.0		1.2	0.14	36500	2	R390-11..
	11	E20	5.5	10.00	5°	1.0	1	3	R390-022EH20-11M	19.3			30.0		1.2	0.14	36500	3	R390-11..
25.0	07	E20	2.0	5.80	1°	0.5	1	5	R390-025EH20-07M	19.3	24.0	25.0	25.0		0.5	0.07	28200	5	390R-07..
	07	E25	2.0	5.80	1°	0.5	1	5	R390-025EH25-07M	24.2	24.0	13.9	25.0	13.9	0.5	0.20	28200	5	390R-07..
	07	E20	2.0	5.80	1°	0.5	1	7	R390-025EH20-07H	19.3	24.0	25.0	25.0		0.5	0.07	28200	7	390R-07..
	07	E25	2.0	5.80	1°	0.5	1	7	R390-025EH25-07H	24.2	24.0	13.9	25.0	13.9	0.5	0.20	28200	7	390R-07..
	11	E25	5.5	10.00	5°	1.0	1	2	R390-025EH25-11L	24.2			35.0		1.2	0.13	36400	2	R390-11..
	11	E25	5.5	10.00	5°	1.0	1	3	R390-025EH25-11M	24.2			35.0		1.2	0.14	36400	3	R390-11..
	11	E25	5.5	10.00	5°	1.0	1	4	R390-025EH25-11H	24.2			35.0		1.2	0.19	36400	4	R390-11..
	17	E25	8.5	15.70	15°	1.5	1	2	R390-025EH25-17L	24.2			40.0		3.0	0.20	30800	2	R390-17..
28.0	11	E25	5.5	10.00	1°	1.0	1	2	R390-028EH25-11L	24.2			35.0		1.2	0.20	31000	2	R390-11..
	11	E25	5.5	10.00	2°	1.0	1	3	R390-028EH25-11M	24.2			35.0		1.2	0.20	31000	3	R390-11..
32.0	07	E25	2.0	5.80	1°	0.5	1	6	R390-032EH25-07M	24.2	30.4	25.0	25.0		0.5	0.12	24400	6	390R-07..
	07	E25	2.0	5.80	1°	0.5	1	8	R390-032EH25-07H	24.2	30.4	25.0	25.0		0.5	0.12	24400	8	390R-07..
	11	E25	5.5	10.00	3°	1.0	1	2	R390-032EH25-11L	24.2			35.0		1.2	0.23	31000	2	R390-11..
	11	E25	5.5	10.00	3°	1.0	1	3	R390-032EH25-11M	24.2			35.0		1.2	0.21	31000	3	R390-11..
	11	E25	5.5	10.00	3°	1.0	1	5	R390-032EH25-11H	24.2			35.0		1.2	0.21	31000	5	R390-11..
	17	E25	8.5	15.70	6°	1.5	1	2	R390-032EH25-17L	24.2			40.0		3.0	0.22	25600	2	R390-17..
	17	E25	8.5	15.70	6°	1.5	1	3	R390-032EH25-17M	24.2			40.0		3.0	0.18	25600	3	R390-17..

Spare parts			
DC		Insert screw	
10.00-32.00	07	5513 020-82	
16.00-22.00	11	5513 020-36	
25.00-32.00	11	5513 020-35	
25.00	17	5513 020-37	
32.00	17	5513 020-39	

For complete list of spare parts, see [www.sandvik.coromant.com](http://www.sandvik.coromant.com)



I74



 
L2



N23



N6



N9



N15



N3