
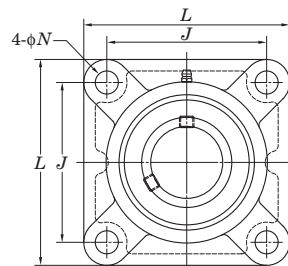


# 角フランジ形ユニット

UCF  
円筒穴(止めねじ付き)  
d 12 ~ (60) mm

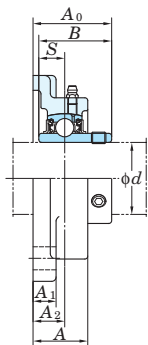

軸径 (mm)	寸 法 (mm)									取付け ボルト の呼び	ユニット 呼び番号	適 用 軸受箱 (普通品)
	L	A	J	N	A <sub>1</sub>	A <sub>2</sub>	A <sub>0</sub>	B	S			
<b>12</b>	86	25.5	64	12	11	15	33.3	31	12.7	M10	<b>UCF201</b>	F204
<b>15</b>	86	25.5	64	12	11	15	33.3	31	12.7	M10	<b>UCF202</b>	F204
<b>17</b>	86	25.5	64	12	11	15	33.3	31	12.7	M10	<b>UCF203</b>	F204
<b>20</b>	86	25.5	64	12	11	15	33.3	31	12.7	M10	<b>UCF204</b>	F204
<b>25</b>	95	27	70	12	13	16	35.8	34.1	14.3	M10	<b>UCF205</b>	F205
	108	30	83	12	13	18	40.2	38.1	15.9	M10	<b>UCFX05</b>	FX05
	110	29	80	16	13	16	39	38	15	M14	<b>UCF305</b>	F305
<b>30</b>	108	31	83	12	13	18	40.2	38.1	15.9	M10	<b>UCF206</b>	F206
	117	34	92	16	14	19	44.4	42.9	17.5	M14	<b>UCFX06</b>	FX06
	125	32	95	16	15	18	44	43	17	M14	<b>UCF306</b>	F306
<b>35</b>	117	34	92	14	15	19	44.4	42.9	17.5	M12	<b>UCF207</b>	F207
	130	38	102	16	14	21	51.2	49.2	19	M14	<b>UCFX07</b>	FX07
	135	36	100	19	16	20	49	48	19	M16	<b>UCF307</b>	F307
<b>40</b>	130	36	102	16	15	21	51.2	49.2	19	M14	<b>UCF208</b>	F208
	137	40	105	19	14	22	52.2	49.2	19	M16	<b>UCFX08</b>	FX08
	150	40	112	19	17	23	56	52	19	M16	<b>UCF308</b>	F308
<b>45</b>	137	38	105	16	16	22	52.2	49.2	19	M14	<b>UCF209</b>	F209
	143	40	111	19	14	23	55.6	51.6	19	M16	<b>UCFX09</b>	FX09
	160	44	125	19	18	25	60	57	22	M16	<b>UCF309</b>	F309
<b>50</b>	143	40	111	16	16	22	54.6	51.6	19	M14	<b>UCF210</b>	F210
	162	44	130	19	20	26	59.4	55.6	22.2	M16	<b>UCFX10</b>	FX10
	175	48	132	23	19	28	67	61	22	M20	<b>UCF310</b>	F310
<b>55</b>	162	43	130	19	18	25	58.4	55.6	22.2	M16	<b>UCF211</b>	F211
	175	49	143	19	20	29	68.7	65.1	25.4	M16	<b>UCFX11</b>	FX11
	185	52	140	23	20	30	71	66	25	M20	<b>UCF311</b>	F311
<b>60</b>	175	48	143	19	18	29	68.7	65.1	25.4	M16	<b>UCF212</b>	F212
	187	59	149	19	21	34	73.7	65.1	25.4	M16	<b>UCFX12</b>	FX12

備考) 1. ユニット呼び番号およびカバー付きユニットの呼び番号には、内径番号の後にはめあい記号が付きます。(62頁の表 10.5 参照)

2. 適用するグリースニップルの呼びを次に示します。

A-1/4-28UNF..... 201~210, X05~X09, 305~308

A-R1/8..... 211~218, X10~X20, 309~328