


ハーフユニオン:H



適用チューブ外径 mm	接続ねじ R	型式	H1 (六角 対辺)	H2 (六角 対辺)	L	M	※A	有効 断面積 mm ²	質量 g
4	1/8	H04-01	10	10	24.2	15	21.1	4	10
	1/4	H04-02	14		28.6		23.1		17
6	1/8	H06-01	10		24.2		21.1		12
	1/4	H06-02	14	12	28.6	16	23.1	11	19
	3/8	H06-03	17		30		24.8		31
8	1/8	H08-01	12		24.2		21.1		16
	1/4	H08-02	14	14	28.6	16	23.1	20	21
	3/8	H08-03	17		30		24.8		30
10	1/4	H10-02	14		28.6		23.1		28
	3/8	H10-03	17	17	30	17	24.8	34	37
	1/2	H10-04	22		33.2		25.9		53
12	1/4	H12-02	17		29.6		24.1		30
	3/8	H12-03	17	19	30	17	24.8	51	39
	1/2	H12-04	22		33.2		25.9		59

※ Rねじのねじ込み後の参考寸法

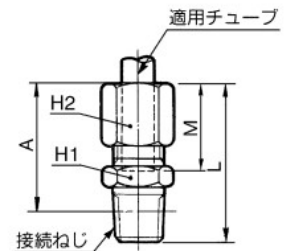


エルボユニオン:DL



適用チューブ外径 mm	接続ねじ R	型式	H1 (六角 対辺)	H2 (六角 対辺)	L1	L2	M	※A	有効 断面積 mm ²	質量 g
4	1/8	DL04-01	10	10	23.5	17	15	19.6	3.5	23
	1/4	DL04-02				19				30
6	1/8	DL06-01	10		23.5	17		19.6		25
	1/4	DL06-02		12		19	16		9	31
	3/8	DL06-03	14		26.5	22		24.5		53
8	1/8	DL08-01	12		24.5	18		21.6		32
	1/4	DL08-02		14		21	16	22.6	19	38
	3/8	DL08-03	14		26.5	22		24.5		54
10	1/4	DL10-02	14		26.5	23		25.8		51
	3/8	DL10-03		17		22	17	24.5	31	57
	1/2	DL10-04	17		28.5	27		29.4		100
12	1/4	DL12-02				25		29.6		76
	3/8	DL12-03	17	19	28.5	26	17	30.3	43	85
	1/2	DL12-04				27		29.4		91


※ Rねじのねじ込み後の参考寸法

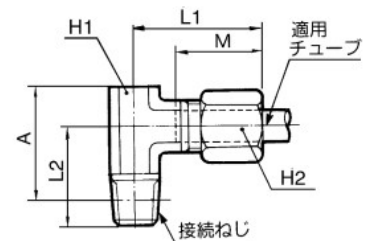

チーズユニオン:DT



適用チューブ外径 mm	型式	H1 (六角 対辺)	H2 (六角 対辺)	L	M	有効 断面積 mm ²	質量 g
4	DT04-00	10	10	23.5	15	5.7	32
6	DT06-00	10	12	23.5	16	14	36
8	DT08-00	12	14	24.5	16	25	47
10	DT10-00	14	17	26.5	17	49	70
12	DT12-00	17	19	28.5	17	55	70

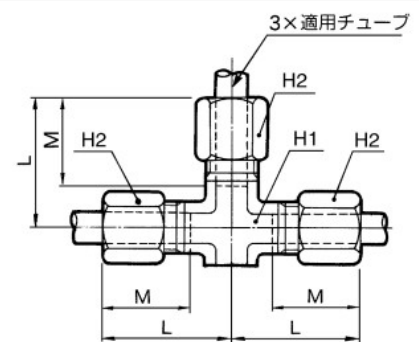

メスユニオン:DHF



適用チューブ外径 mm	接続ねじ Rc	型式	H1 (六角 対辺)	H2 (六角 対辺)	L1	L2	M	有効 断面積 mm ²	質量 g
4	1/4	DHF04-02	17	10	30.3	16	15	4	27
6	1/4	DHF06-02	17		30.8	16.5		11	28
	3/8	DHF06-03	19	12	32.8	18.5	16		31
8	1/4	DHF08-02	17	14	29.8	15.5	16	20	30
10	1/4	DHF10-02	17	17	30.8	16.5	17	34	37
12	1/4	DHF12-02	17	19	30.8	16.5	17	51	40

